

3. Remote Control Setting

Press and hold "F" button of approximately 2 seconds (without pressing the button of remote control), until the indicator show "FF" and keep blinking, release the "F" button, then start to the setting (Do step 3.1 or 3.2)

3.1 Activating the Remote Control

Keep pressing any button on the remote control, if the indicator retain lighting. it means the remote controls are valid (50 remote controls can be set at most)


*Verify the remote control is activated by pressing the remote control button. The LED will be on/Off (see notes LED Diagram)

The next step is only required to remove all remotes from memory.

3.2 Erasing the code

Press and Hold on "Enter" button on the PCB for over one second until the indicator retain lighting. Then all the remote controls are invalid.

****Pedestrian opening push "P" button to perform single swing opening**

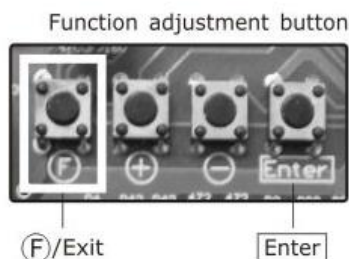

These buttons are found on the control board of the gate opener (not the remote control)

433MHZ Remote control



The remote control cyclic form is " open - stop - close "