Automate My Place – WJKMP201/2 (SD1000/SD1800)

Programmable Remote Controller



Distance: >=30 meters

Please Note: Remote controls will need to be activated before use by following the steps below.

Setting:

- 1. Hold the A and B buttons on the remote control to be programmed. After the LED flashes quickly 3 times continue holding the A button and release and press the B button 3 times. The Light will continue to flash showing it is now in copy mode. You can now release button A.
- 2. Each button is copied separately. Hold the original remote control next to (touching) the remote control to be copied and hold down the button to be copied on the original and the new remote control together. The LED on the new remote should start to blink slowly and once code has been copied the LED will stay on almost constantly. This means the button has been copied. You may need to adjust the positions of the remote controls for the signals to be clear enough to copy. If this step doesn't complete successfully, the remotes either will either have very short range or not work at all. Repeat this step if required.
- 3. Step 2 can be repeated for each button to be copied.